

QSA GLOBAL.



OPERATING MANUAL. MAN-059, REVISION D

OPENVISION™ DX.

OVDX-NDT-70 HARDWARE MANUAL

Revision Record

Revision	Date	Description
A	06/2019	Production Release
B	03/2020	r3.0.0 Software updates, Tablet operation, Remote trigger configuration, Remote software update instructions
C	02/2023	X-Ray Tube Warm Up
D	11/2023	Updates to add description of warning lights/audible alerts on device and cover x-ray tube disposal to comply with Canada Safety Code 34 and ANSI/HPS N43.5-2005.



DANGER – RADIATION WARNING

OpenVision™ DX devices must be operated only by trained and qualified radiographers who have read and understand this operating manual or by trained assistants working under their direct supervision.

The OpenVision™ DX is classified as a shielded x-ray tube assembly.

WARNING

The use of these radiographic devices by unqualified personnel, when safety procedures are not fully met, or when improperly installed could result in life-threatening dangers.

The x-rays produced by these devices emit high levels of highly penetrating radiation during use.

Since radiation cannot be detected by the human senses, strict operating and emergency procedures must be followed. The proper use of calibrated and operable survey meters must be employed to avoid potentially dangerous levels of radiation exposure.

Take advantage of the three basic radiation protection methods to minimize radiation exposure:

Time: Spend less time near the radiation source.

Distance: Increase your distance in a direction away from the radiation source.

Shielding: Use effective shielding between you and the radiation source.

Do not perform any unauthorized modifications to the device or components of the system.

It is important that trained and qualified radiographers perform or supervise a daily safety inspection of the radiography system for obvious defects prior to operation of the system.

Do not use any components that are not approved for use with the radiography system, or after-market components that may compromise the safety designed into the system.

Consult with state and/or local governmental regulations and industry standards for additional requirements pertaining to the operation of any x-ray equipment.

TABLE OF CONTENTS.

Radiation Warning	3
Table of Contents	4
Introduction.....	5
Equipment Specifications.....	6
Safety Precautions	8
Operating Conditions.....	10
X-Ray Training.....	10
Precautions.....	10
getting to know your OpenVision™ DX System.....	12
What's Included	12
System Overview.....	14
OpenVision™ DX Main Housing Details	15
Monitor.....	16
Trigger Assemblies.....	17
Principles of Operation.....	18
Radiographic Quality	18
Sources (X-Ray & Gamma Ray)	18
Simplified Exposure Determination with X-Rays	18
Radiation Zones	19
Output Radiation Levels	19
Backscatter Radiation Levels	20
Backscatter	21
Operation.....	23
Quick Setup / Scanning	24
X-Ray Tube Warm Up	29
Accessories	30
Heads Up Display (HUD).....	30
Remote Trigger and Trigger Button Options	33
Wi-Fi Tablet	34
Imager Shield.....	34
Maintenance.....	35
Disposal of X-Ray Equipment.	36
Troubleshooting.	37
QSA Global, Inc. Contact Information.....	38
Appendix 1: Parts List.	39

INTRODUCTION.

OpenVision™ DX is an easy to use, digital X-ray system with live video output for real-time radiographic inspection and reporting. A patent-pending combination of a c-arm mounted 70 kV X-ray source and a digital imager allows you to observe external defects as small as 0.010-inch (250 µm) on insulated piping.

OpenVision DX can be used on various insulation and cladding combinations, including mineral wool and calcium silicate with galvanized steel, stainless steel, and aluminum cladding up to 36 inches (91 cm) in total diameter.

OpenVision DX enables the inspection of hundreds of feet (many tens of meters) of insulated piping to quickly identify indications of corrosion or corrosion precursors such as scaling, external wall loss, and wet insulation. Pictures and real-time videos are recorded and downloaded with the touch of a button for rapid review and reporting.

EQUIPMENT SPECIFICATIONS.

Table 1 OpenVision™ DX Specifications			
Imaging Area (Field of View)	4 in. x 6 in. (10 cm x 15 cm)		
<u>Dimensions</u>			
X-Ray Tube to Imager Throat Depth	9.5 in. (24 cm) to 20.9 in. (53 cm)		
Imager Thickness	21 in. (58 cm)		
X-Ray Tube Thickness	2.5 in. (6.4 cm)		
Startup Time (est.)	30 seconds		
Shutdown Time (est.)	5 seconds		
<u>X-Ray Energies</u>	Voltage (kV)	Current (mA)	Dose @ 12 in (30.5 cm) from beam port
Low	40	0.300	50 R/hr (0.5 Sv/hr)
Medium	55	0.218	80 R/hr (0.8 Sv/hr)
High	70	0.171	95 R/hr (0.95 Sv/hr)
Beam Collimation (Approximate)	18° Horizontal 10° Vertical		
Image Resolution	250 microns (0.01in)		
<u>Battery Life</u>			
Continuous duty with 5 Ah battery	3 hours		
Standby	8 hours		
<u>System Weight</u>			
C-arm	15 lbs. (6.8 kg)		
Monitor w/ handle (optional)	2 lbs. (.9 kg)		
Packaged system (shipping weight)	50 lbs. (23 kg)		
Operating Temperature	-20° F to 120° F (-29° C to 49° C)		
Storage Temperature	-20° F to 140° F (-29° C to 60° C)		
Display Options	HDMI Monitor: 7 in. LCD, 1920 x 1200 pixels WiFi Tablet: 10 in Touchscreen, 1400 x 900 PirateEye: 854 x 480 pixels Also compatible with any device that accepts an HDMI signal		
<u>Recording (OpenVision DX)</u>			
Internal storage	128 GB		
Resolution	1280 X 720		
Image / video transfer	USB		
<u>Recording (WiFi Tablet)</u>			
Internal storage	4 GB with expandable 128 GB memory		
Resolution	1280 X 720		
Image / video transfer	USB		
Shipping Dimensions	32 in. x 20.5 in. x 12.5 in (82 cm x 52 cm x 32 cm)		
FDA Accession #	1680071-000		

QSA GLOBAL.

The OVDX-NDT-70 is built in compliance with ISO 9001:2015 and meets the following standards when used as directed:

- ANSI/HPS N43.5 (2005)
- Ionizing Radiation Regulations (2017)
- ISTA 3A Over the Road vibration standard
- MIL-STD-810, Method 514, Annex C, Cat 4
- REACH/ROHS
- 

Heads Up Display (HUD)

- ANSI Z87.1+, US Federal OSHA
- US Mil Spec MIL-PRF-31013
- CE END 166 FTKN

Battery/Charger

 Underwriters Laboratory for Canada and U.S.

SAFETY PRECAUTIONS.



WARNING

Do not perform any unauthorized modifications to the OpenVision™ DX system or components of the system.

It is important that trained and qualified personnel perform or supervise a daily safety inspection of the OpenVision DX system for obvious defects before using the system. Do not compromise on safety. Always perform the daily inspection of the system prior to use.

Any foreign material (dirt, mud, ice, etc.) must be removed before using the system. Inspect, clean, and test the equipment as described in this manual to ensure long-term safety and reliability.

Do not use any component that is not approved for use with the OpenVision DX system or any after-market component as they may compromise the safety features designed into the system.

Defective equipment that is discovered during the daily inspection must be removed from service until repaired or replaced.

The user of this equipment must follow the operating instructions, in the order shown, to ensure safe operations and compliance with government regulations.

During emergencies, release the trigger to cease x-ray production. Turn the key to the OFF position to turn off the device. If necessary, remove the battery.

Personnel operating this equipment must be completely familiar with this manual and they must read and understand these important safety alerts before proceeding.

IMPORTANT SAFETY ALERTS

NOTICE: Can cause minor problems and reminders.

CAUTION: Can cause equipment damage or potential problems.

WARNING: Can cause serious or fatal injury.



WARNING: JOB SITE SAFETY PRECAUTIONS

Surveillance

Only trained and qualified individuals, or assistants working under their direct supervision, may operate the OpenVision DX system. The qualified individuals must be physically present at the site and able to control and limit access to the vicinity of the work.

Locking

Keep the OpenVision DX controller locked while assembling the system and when not being used to perform scanning. Locked is defined as the controller key switch in the Off position with the key removed. Store the key in a secure location.



WARNING: ACCIDENTAL RADIATION OCCURANCES

An Accidental Radiation Occurrence is defined by Part 21 CFR 1000.3 as a single accidental event or series of accidental events that has/have resulted in injurious or potentially injurious exposure of any person to electronic product radiation as a result of the manufacturing, testing, or use of an electronic product.

Report any accidental radiation occurrences (ARO's) to QSA Global, Inc. so that QSA Global, Inc. may notify the Food and Drug Administration.



NOTICE: DOSIMETRY

It is the responsibility of users of this equipment to comply with all local, national and international regulatory and licensing rules and regulations. Proper dosimetry including film badges, thermoluminescent dosimeters or optically stimulated luminescence badges (OSL); direct reading pocket dosimeters and audible alarm ratemeters may be required to be worn during all radiographic operations.

QSA GLOBAL

Operating Conditions

OpenVision™ DX is designed for applications where the equipment will not be exposed to harsh handling or environmental extremes. See Equipment Specifications for more information.

X-Ray Training

It is required that OpenVision DX operators are properly trained and qualified to perform radiographic inspections. This manual does not address radiographic inspection techniques or procedures.

Precautions

The OpenVision DX system is designed for portability and is ruggedized for industrial environments. However, it does contain fragile components. Use care to avoid strong vibrations and shock conditions (e.g. equipment drops or transportation outside the approved case) to the main housing, imager housing, and display(s).

CAUTION

Do not attempt to open or modify the imager housing, main housing, or X-ray tube. Opening any of these components will void the system warranty and may expose the operator to a high voltage shock hazard.

CAUTION

Do not allow liquids to come into contact with any part of the OpenVision™ DX system. The main and imager housings have been made water resistant, but they are not “Waterproof”. Appropriate care should be taken to protect all cabling and connectors to ensure reliable and safe operation of the OpenVision DX system.



WARNING: Target Laser

This device uses a laser for targeting. This is classified as a Class 1 Laser Product since the laser is enclosed to make it safe. Class 1 laser products are designed to prevent the laser from becoming an exposure hazard. Class 1 laser products are considered safe under all intended conditions of normal use. No attempts to modify or remove the laser in this device should be made as this will void the Class 1 Laser Product safety classification.





WARNING: X-Ray Tube Dormancy

If the period between firing X-rays exceeds 60 days, then possible damage can result to the X-ray tube, causing machine failure or the issuance of error codes. For example, if the machine is not fired within 60 days and then fired on the highest settings, this may cause X-ray tube damage and improper machine operation. To prevent this possible damage, it is recommended that the user fire X-rays at least once every 60 days if the machine will sit idle for a period of time.

In the event that the machine has sat idle for 60 days or longer (that is, has not fired X-rays within the past 60 days or longer), then the X-ray Warm-up Procedure must be performed in full to prevent possible machine damage.

QSA GLOBAL.

GETTING TO KNOW YOUR OPENVISION™ DX SYSTEM.

What's Included

The OVDX-NDT-70 is shipped complete in a Pelican case.

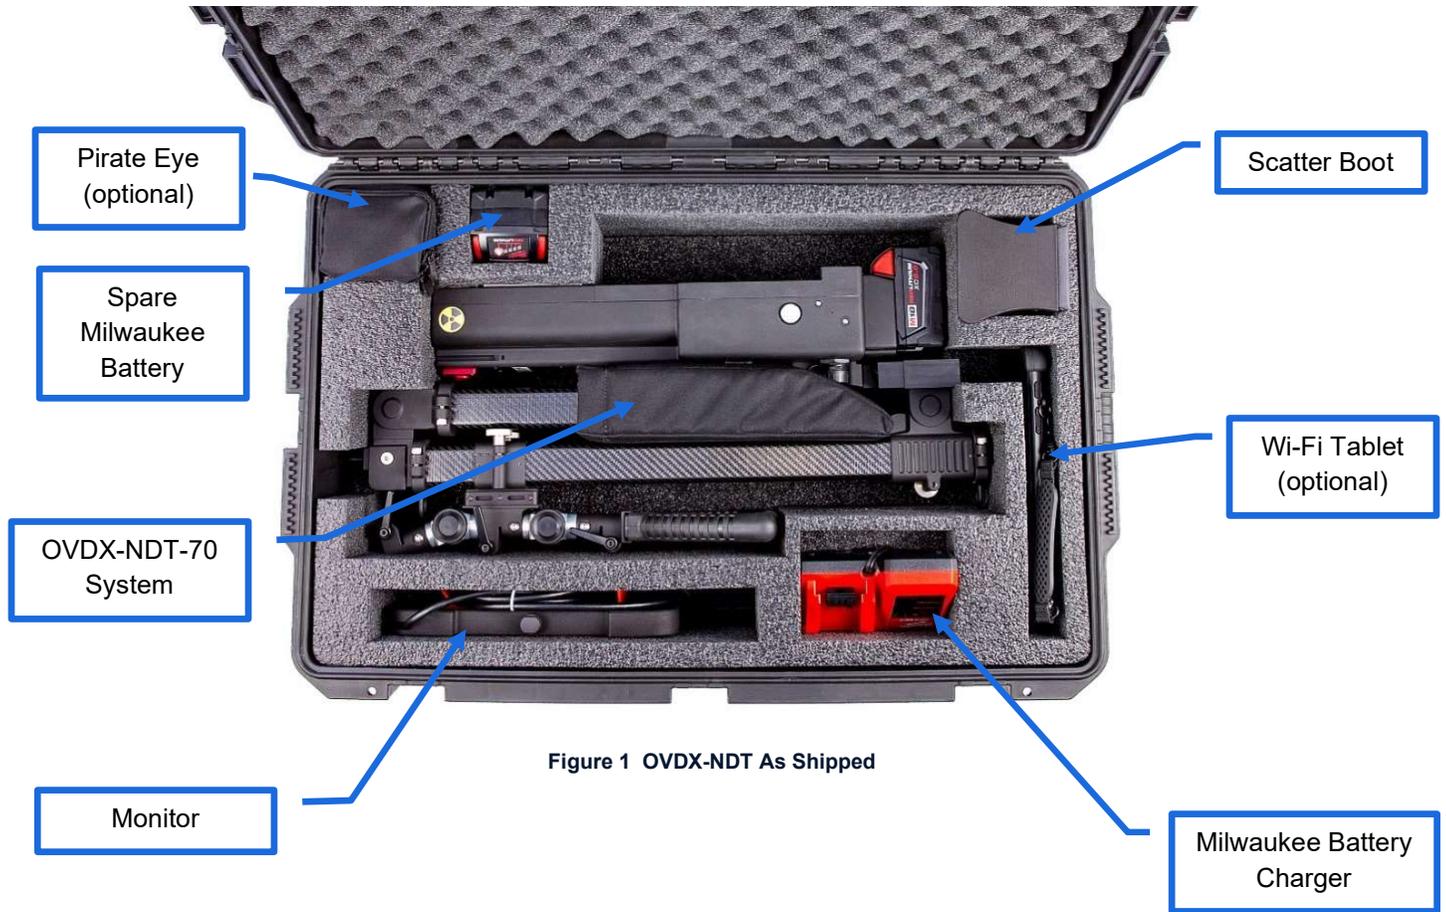


Figure 1 OVDX-NDT As Shipped

QSA GLOBAL

Some components are packaged and placed in bags or located loose in the Pelican case.

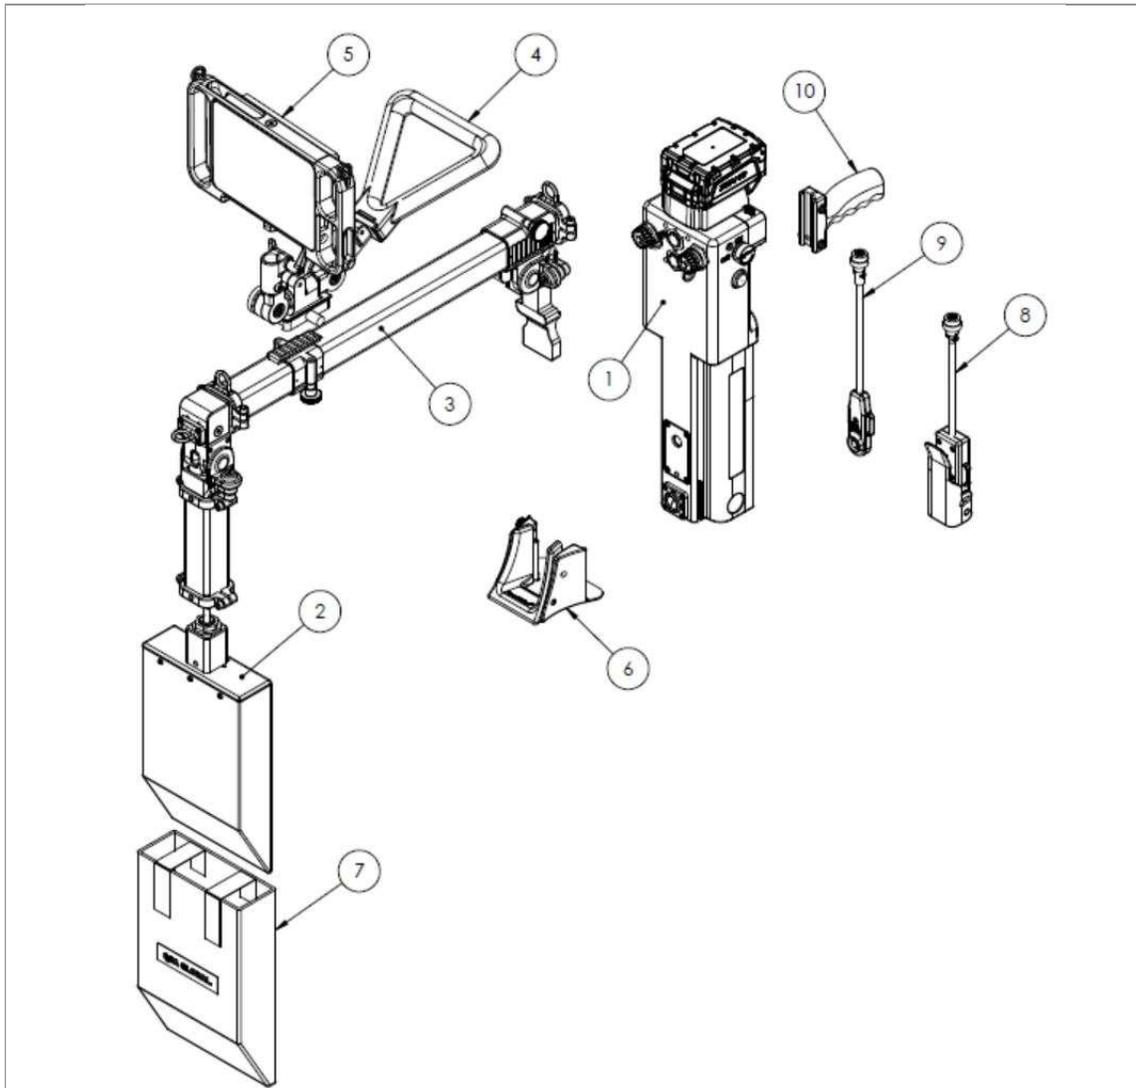


Figure 2 - OVDX AS SHIPPED MISC. COMPONENTS

ITEM	PART #	DESCRIPTION
1	-	Tablet Mounting Bracket (with optional tablet only)
2	-	Monitor Sunscreen
3	-	Tablet Charger (with optional tablet only)
4	ELE114	USB-A to USB-C Adapter – Allows connection USB-A flash drive (with optional tablet only)
5	ELE115	Ethernet Adapter – Allows connection from Ethernet to OVDX or Tablet
6	ELE116	USB 3.0 Adapter – Allows connection from OVDX USB-A to Ethernet Adapter
7	-	Monitor batteries and charger
8	-	USB charger cable – Allows for changing monitor batteries via USB outlet
9	ELE111	USB Wall Charger – Allows charging of monitor batteries via standard 120 outlet
10	-	Monitor power supply – Allows direct power to monitor via 120 outlet
11	TOL028	7 Piece Allen wrench set
12	313425	Bungee Sling
13	-	Monitor Mount – Allows mounting of monitor directly onto OVDX
14	313056	Controller Key – Used to turn on / power up OVDX – Removed for shipment
15	HDL010	Pistol Grip – Mounts to picatinny – Removed for shipment
16	415540-A	Trigger Button Harness (3 ft)
17	415530-B	Remote Trigger Harness (6 ft)

QSA GLOBAL.

System Overview




Item	Part No.	Description
1	415100-NDT	OVDX Main Housing Assembly
2	415200-NDT	OVDX Imager Assembly
3	415300	OVDX C-Arm Assembly
4	415400	OVDX Handle Assembly
5	415440	OVDX Lightweight Monitor Assembly
6	415600	Backscatter Shield Assembly (Scatter Boot)
7	415200-11	Imager Cover
8	415530-B	Remote Trigger Assembly (6ft)
9	415540-A	Trigger Button Assembly (3 ft)
10	HDL010	Tactical Foregrip

Figure 3 OpenVision DX Assembly Description

QSA GLOBAL

OpenVision™ DX Main Housing Details

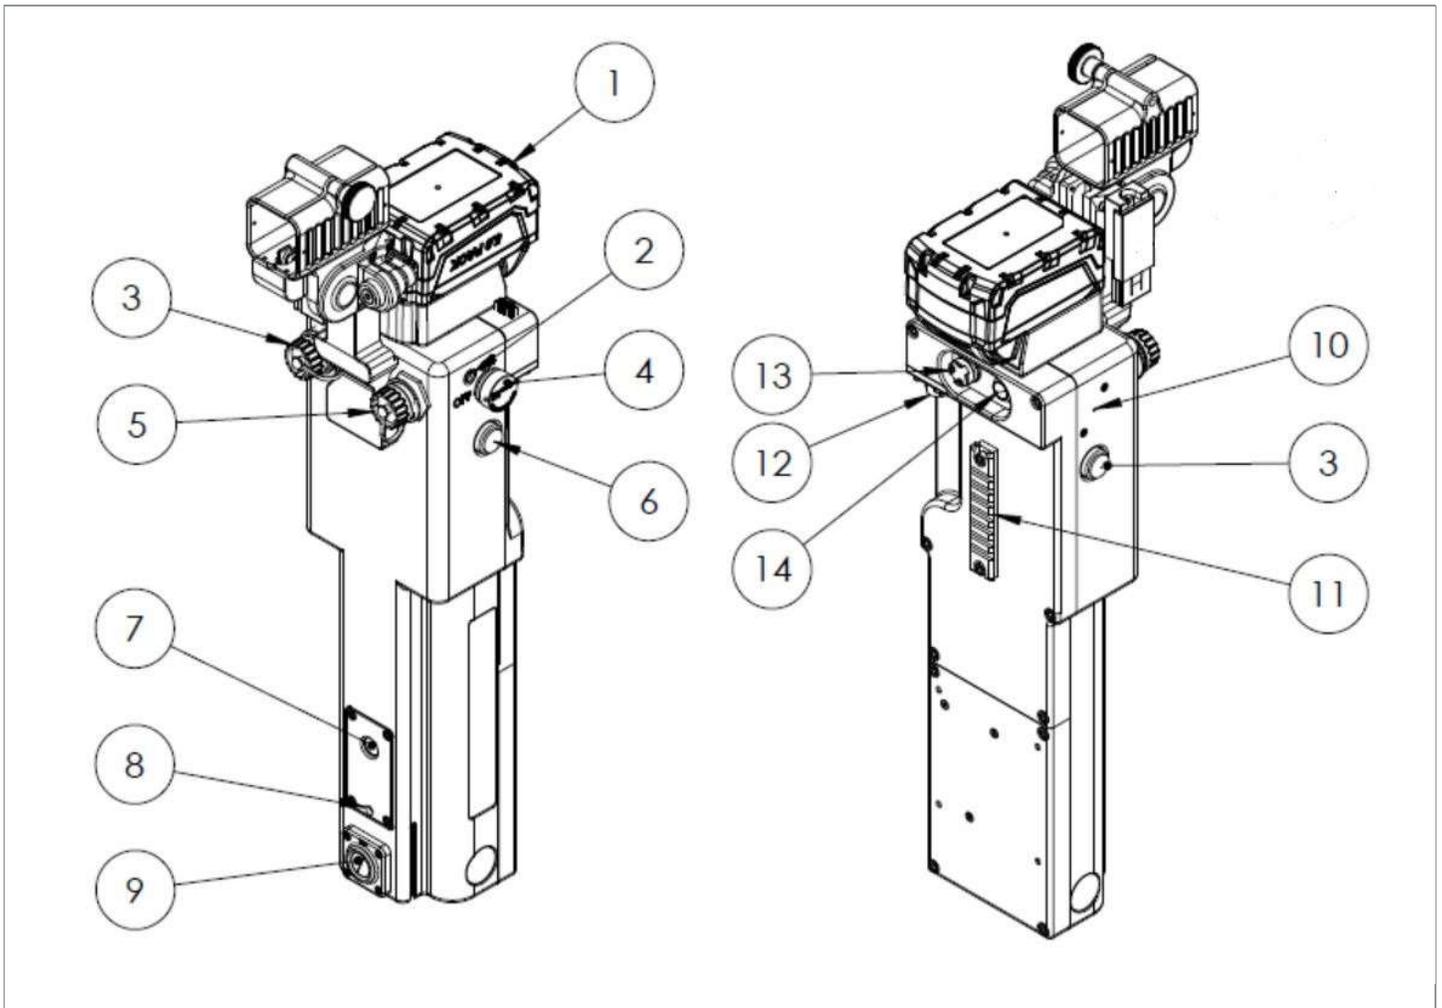

Item	Part No.	Description
1	ELE054	Milwaukee® M18™ Battery
2	---	CPU Power Indicator
3	---	USB Connection
4	313056	Controller Key
5	---	HDMI Connection 1
6	---	System Status Indicator
7	---	Targeting Camera
8	---	Targeting Laser
9	---	X-Ray Port
10	---	Audio Speaker
11	RAI002	Picatinny Rail
12	---	Trigger Connection
13	---	Hat Switch
14	---	Image Capture / Input Button

Figure 4 OpenVision DX Main Housing Assembly (Item # 415100-NDT)

QSA GLOBAL.

Monitor

The OpenVision™ DX monitor (Figure 5 and Figure 6) is a lightweight 7-inch HDMI display. It can be connected to either of the two HDMI ports provided on the OpenVision DX via the HDMI cable provided. The monitor comes configured to work with your OpenVision DX system. Spare Batteries and a battery charger (Figure 7 Battery Charger

) are included.



Figure 5 Monitor Assembly



Figure 6 Back of Monitor



Figure 7 Battery Charger

QSA GLOBAL.

Trigger Assemblies

The OVDX-NDT-70 comes standard with two trigger assemblies:

- 415540-A (Figure 8) can be used for X-ray firing only.
- 415530-B (Figure 9) can be used for X-ray firing and Image / Video capture. Refer to Figure 10 for the connection location. Refer to software user manual (MAN-063) for operation.



Figure 8 415540-A Trigger Button Harness



Figure 9 415530-B Remote Trigger Harness



Figure 10 Trigger Assembly Connection

PRINCIPLES OF OPERATION.

Radiography uses X-rays or gamma rays passing through a specimen onto an imaging medium (film, digital imager, imaging plate, etc.) on the opposite side. The quality and quantity of radiation reaching the imaging medium is largely determined by the object's thickness and density. Radiation *energy* (X-ray = kV; Gamma Ray = isotope) governs its penetrating power. Radiation *intensity* is governed by current (milliampere or mA) for X-rays, and by content activity (Curie/Becquerel) for radioisotopes.

Radiographic Quality

Radiographic quality depends on an image's photographic (density, contrast) and geometric (definition, distortion) properties. Proper *energy* and *intensity* selection are both essential for producing high-quality radiographs.

Sources (X-Ray & Gamma Ray)

Table 2 Radiation Comparisons

Radiation Source	Energy (Quality)	Intensity (Quantity)
X-Ray	Determined by voltage (kV) Higher kV = shorter wavelength = higher penetration	Determined by tube current (mA) Higher mA = more electrons = more X-rays
Gamma Ray	Determined by type of radioisotope (keV or MeV) Higher isotope energy = increasing penetrating capability: Co-60 > Cs-137 > Ir-192 > Se-75	Determined by radioactivity (Ci/Bq): Gamma Rays produced by unstable nuclei disintegrations Higher Ci = more disintegrations of nuclei = more gamma rays

Simplified Exposure Determination with X-Rays

By using X-rays, the OpenVision™ DX system has the advantage of real-time radiography (immediate availability of images). Time calculations (as used in gamma-ray radiography exposure) are not needed for X-ray radiography.

To determine exposure requirements, start on the lowest kV and mA settings and adjust to achieve the desired image quality.

QSA GLOBAL.

RADIATION ZONES.

Output Radiation Levels

OpenVision™ DX radiation levels vary depending on kV/mA settings. QSA Global, Inc performs testing at maximum power at the highest kV setting (70 kV, 0.17 mA) to verify collimation and image quality. Operators must be aware of safe boundary distances while using the OpenVision DX. When the main housing is fully expanded ("D" = 53 cm [20.8 in]), the most susceptible area of high dose rate (when specimens do not block entire X-ray output beam) is immediately adjacent to imager housing. The "C" callout in 11 is positioned in this approximate area.

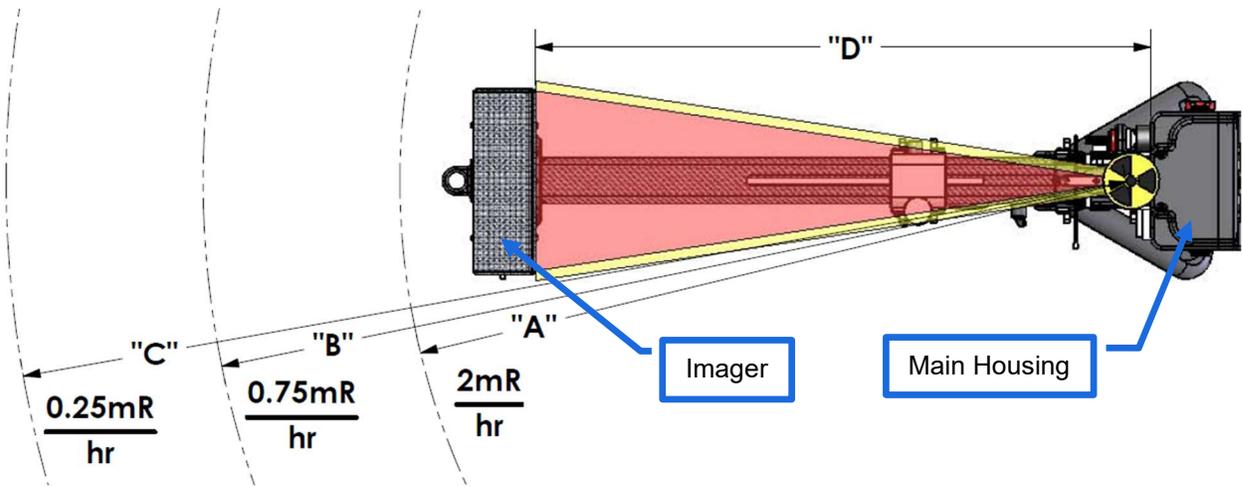


Figure 11 OpenVision DX Output Boundary Distances

11 shows boundary distances for 2, 0.75 and 0.25 mR/hr. Table 3 below details typical distances for these boundary levels with different operating conditions.

NOTICE: The imager shield (see Figure 31 on page 34, item #415230, not shown in 11) provides shielding to either side of the imager when the specimen being imaged (e.g., small piping) does not completely attenuate the X-ray output.

Table 3 Boundary Distance Comparison

Main Housing Distance to Imager (in [cm]) "D"	kV / mA	Imager Shield?	Boundary Distance (ft [m])		
			2 mR/hr (20 μSv/hr) "A"	0.75 mR/hr (7.5 μSv/hr) "B"	0.25 mR/hr (2.5 μSv/hr) "C"
20.8 [53] (Fully Expanded)	70 / .17	No	82 [24.9]	134 [40.7]	231 [70.5]
20.8 [53] (Fully Expanded)	70 / .17	Yes	10.4 [3.2]	17.4 [5.3]	30 [9.2]
13.8 [35]	70 / .17	No	17.4 [5.3]	28.2 [8.6]	49 [15]
13.8 [35]	70 / .17	Yes	9.8 [3.0]	16.1 [4.9]	27 [8.5]

Actual measurements can vary based on the material being scanned and its geometry. To minimize operator exposure, QSA Global, Inc. recommends using a backscatter shield assembly (Item # 415600) with your OpenVision DX.

QSA GLOBAL.

Backscatter Radiation Levels

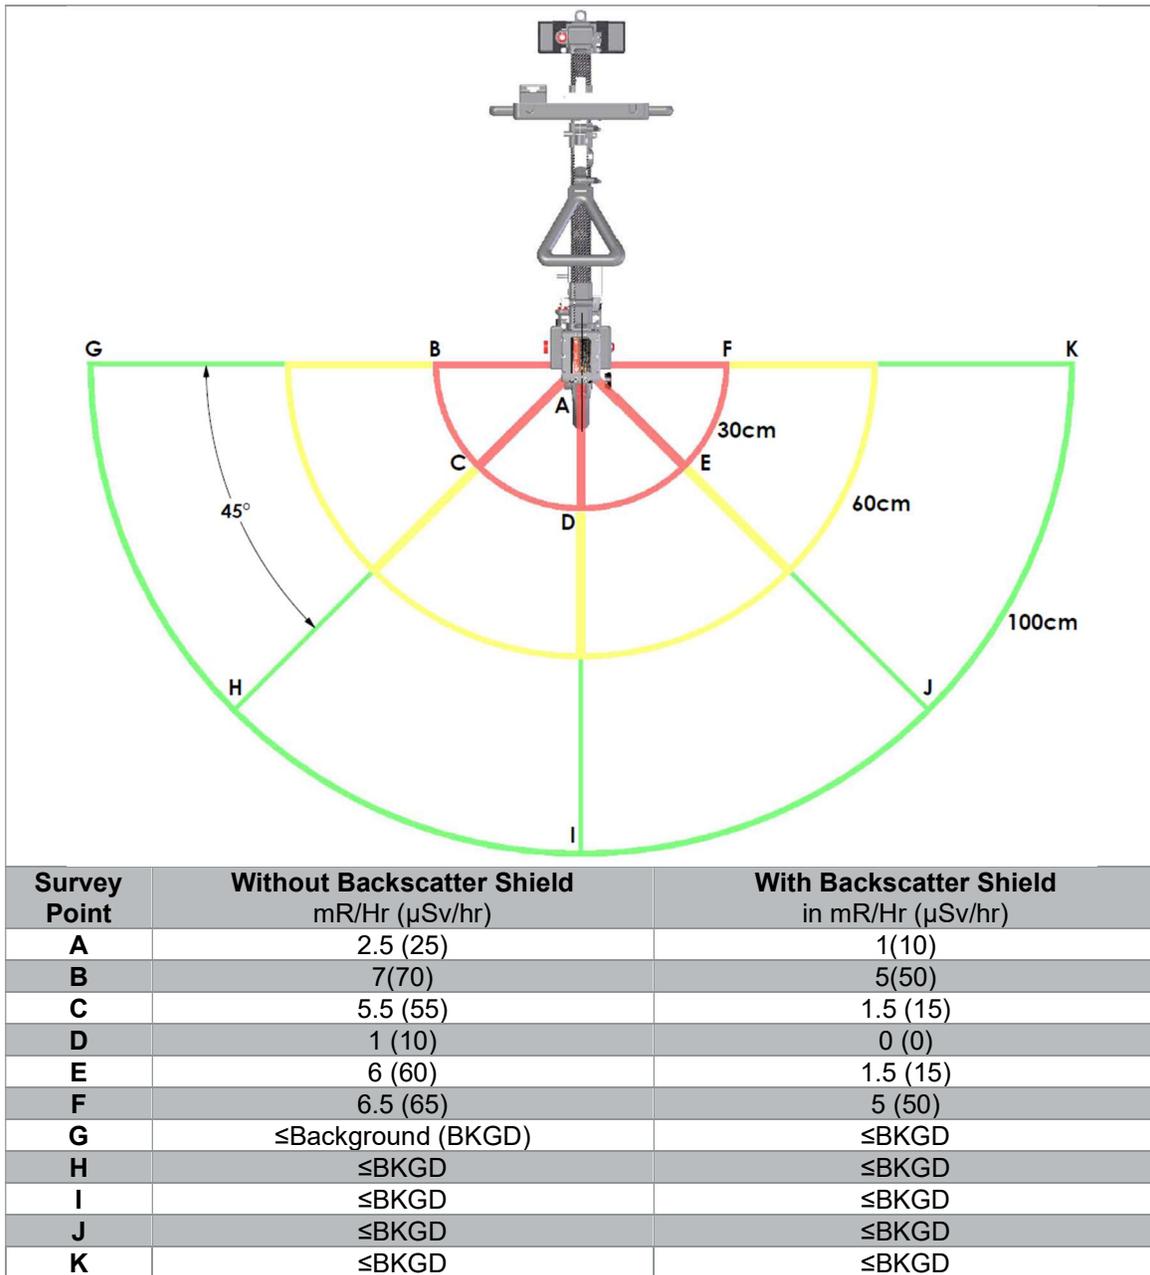


Figure 12 Example Scatter Radiation Survey

Figure 12 shows an example survey of backscatter radiation (user exposure) for a typical sample (**NOTICE:** for reference only; actual readings may vary). The example survey shown in Figure 12 was created with the following conditions:

- 8 in steel pipe
- 2 in calcium silicate insulation
- .040 in [1 mm] thick aluminum cladding
- 70 kV @ 0.17 mA (maximum power at the highest kV level)

See the following section for additional information on backscatter.

QSA GLOBAL.

Backscatter

Backscatter occurs when X-rays interact with material (piping, insulation, etc.), potentially travelling in undesirable directions (e.g. towards the operator). Backscatter is dependent on many variables including geometry, material, and energy level. It can potentially increase the dose to the operator's extremities.

The best way to minimize backscatter is to use the lowest kV / mA combination to achieve acceptable images. Use of the optional backscatter shield (Figure 13) will help reduce the amount of backscatter when firmly applied to the scanning surface as shown in Figure 15.

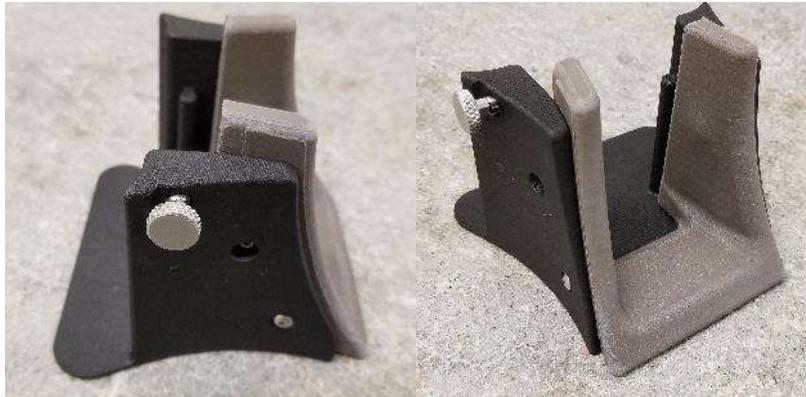


Figure 13 Optional Backscatter Shield (Item # 415600)

CAUTION

Whenever scanning an unknown material and/or geometry, it is recommended that operators monitor for backscatter levels to minimize operator dose.

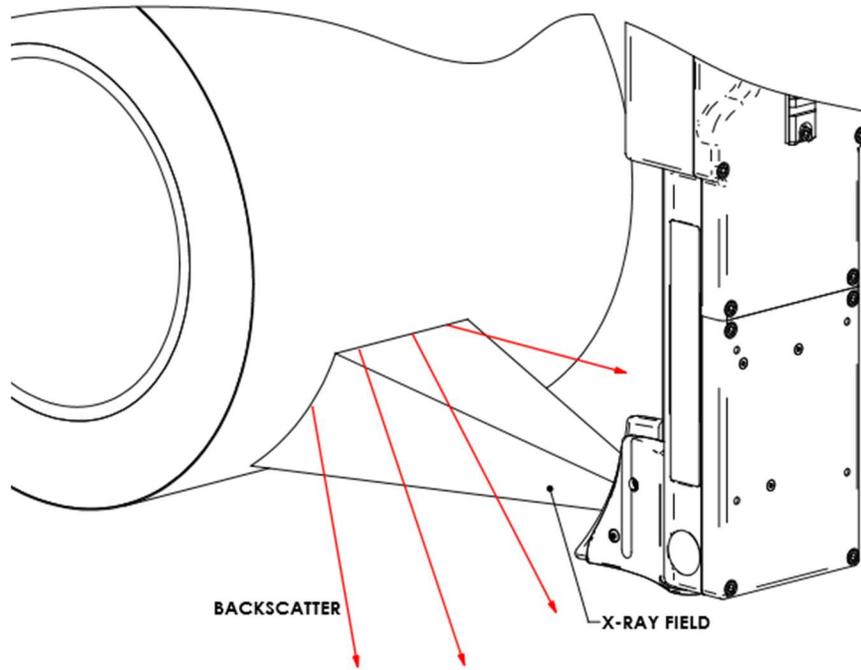


Figure 14 Example of Backscatter

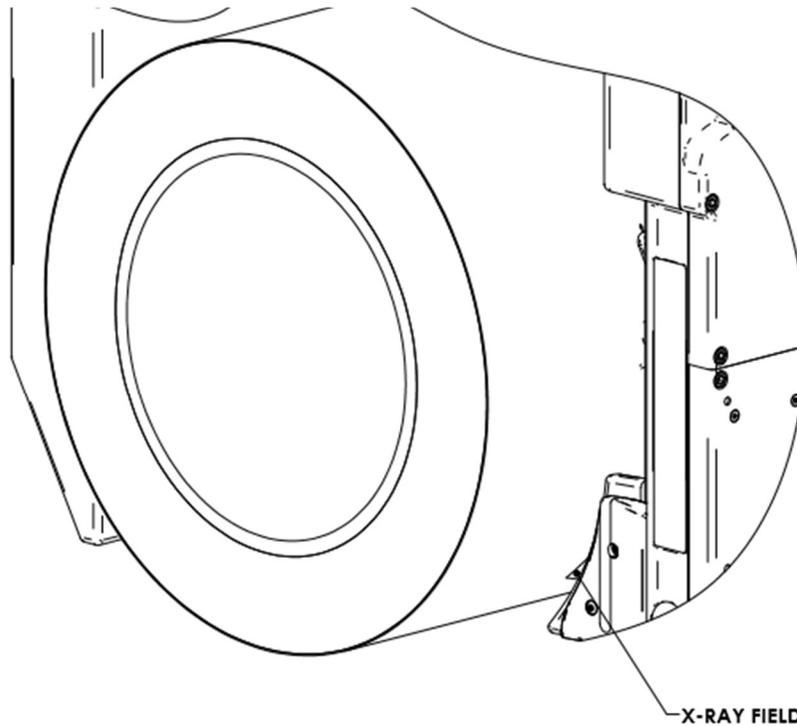


Figure 15 OpenVision DX with backscatter shield properly positioned against insulation sheathing.

QSA GLOBAL.

OPERATION.



WARNING

When the key is initially turned to “ON”, the unit will warm up and the system status indicator will turn **AMBER** (see Figure 3). Once the unit has warmed up and is ready to make an exposure, the status indicator will turn **GREEN**. When the trigger is depressed to make an exposure, a audible beep warning every 1 second is generated, and the status indicator will again turn **AMBER** (see Figure). The audible beep and the **AMBER** indicator light together indicate that ionizing radiation is being produced. (Note: if the trigger is depressed but the unit is not ready to take an exposure (e.g., no **GREEN** indicator or scatter shield not in place), then the audible alert will trigger for 4-5 beeps then stop, but no x-rays will be produced.)

Once an exposure is successfully initiated, the exposure will continue until either the trigger is released, or 90 seconds have elapsed. The maximum time a single exposure can be performed with this device is 90 seconds after which the device will automatically turn off. The indicator light will again turn **GREEN** after completion of an exposure once the unit is ready to perform another exposure.

NOTE: The device can produce a **RED** status indicator light, but this only occurs when the unit is indicating an operational error.

If you wish to perform extended operations with the OpenVision DX system, ensure that ambient temperatures are below 120 °F (49 °C) and above -20 °F (-29 °C).

QSA GLOBAL.

Quick Setup / Scanning

Performing the following steps is necessary to make the system operational and ensure it is operating properly. Your OpenVision™ DX system can be setup and ready for scanning in a matter of seconds by following these steps:

- Unlock main housing by pressing red circular release button and unfold to operating position:

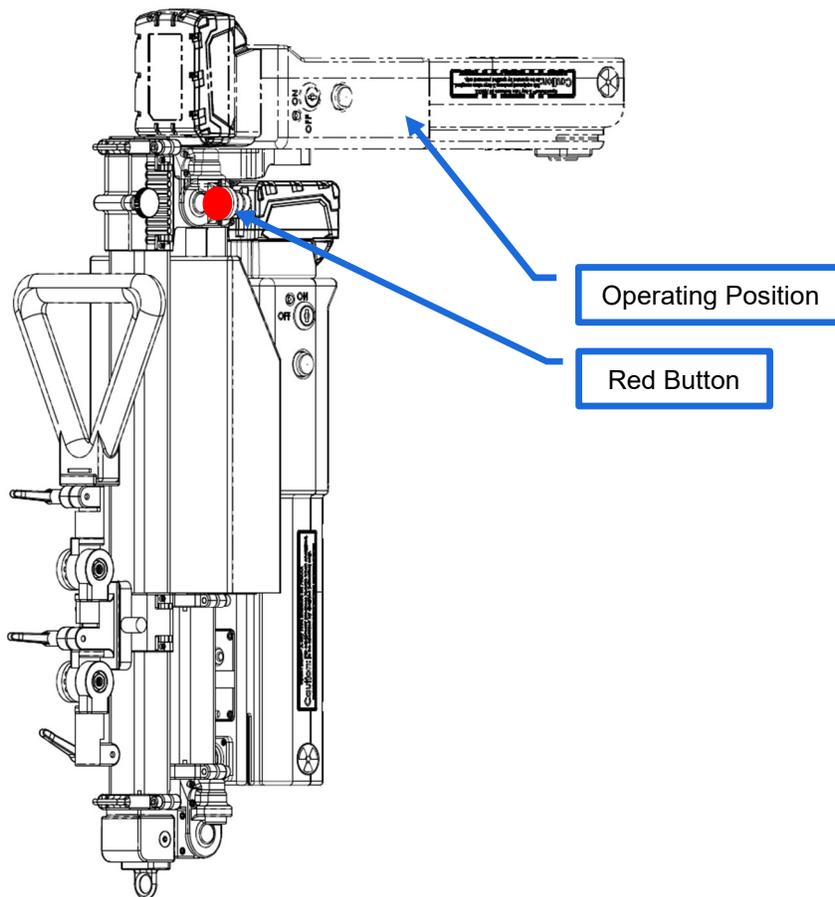


Figure 16 Unlock Main Housing

QSA GLOBAL

- Repeat action for imager housing:

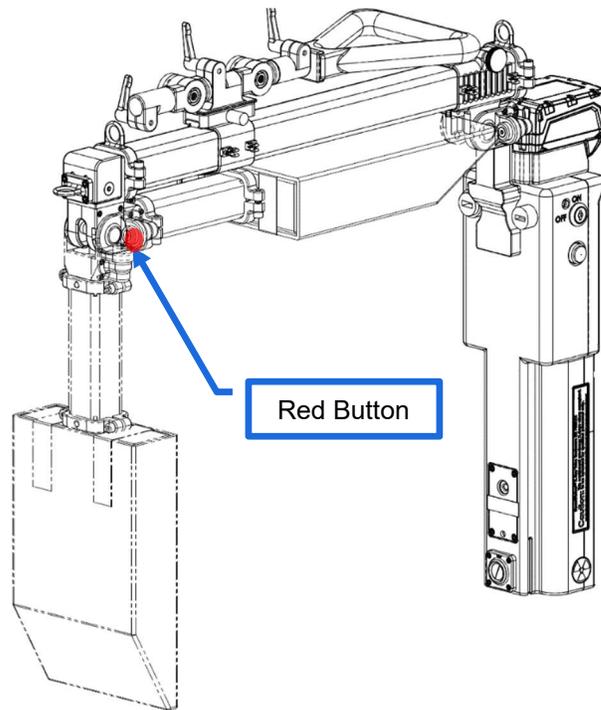


Figure 17 Unlock Imager Housing

- Position handles, attach and position pistol Grip and monitor mount as desired:

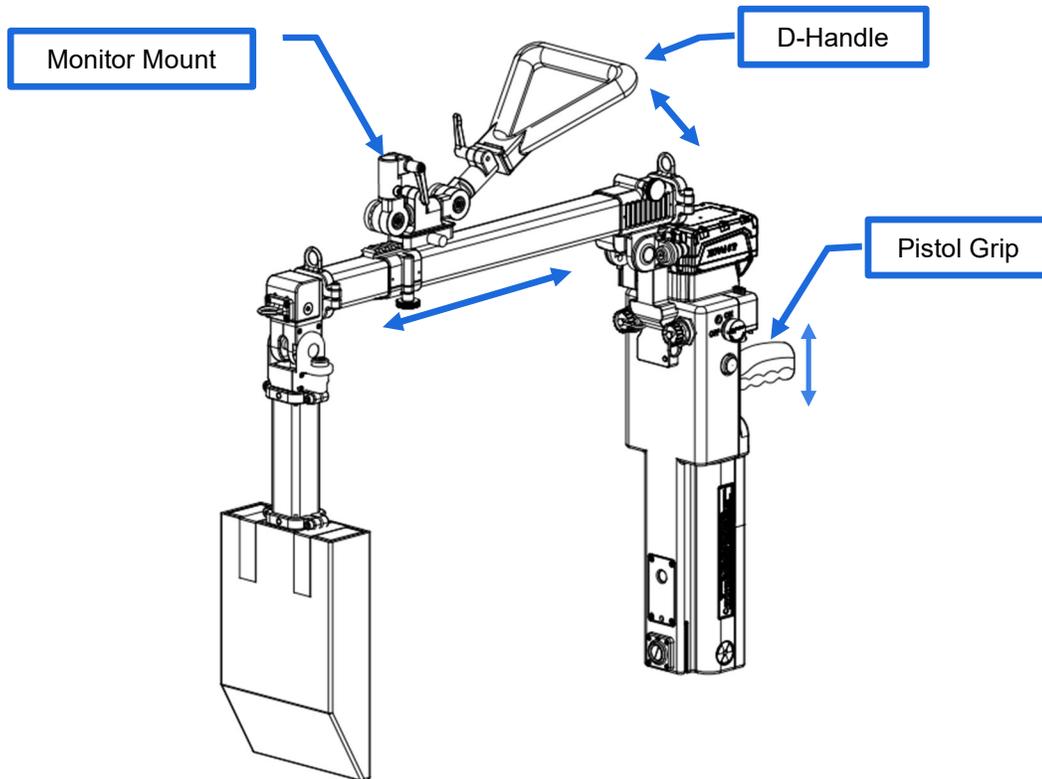


Figure 18 - Handle Adjustments

QSA GLOBAL.

- The OpenVision DX utilizes standard picatinny rails and allows the handles and grips to be configured in multiple ways to suit different applications (Figure 19) shows one such configuration. The grip is moved to the top tube and the D-handle is moved to the main housing.

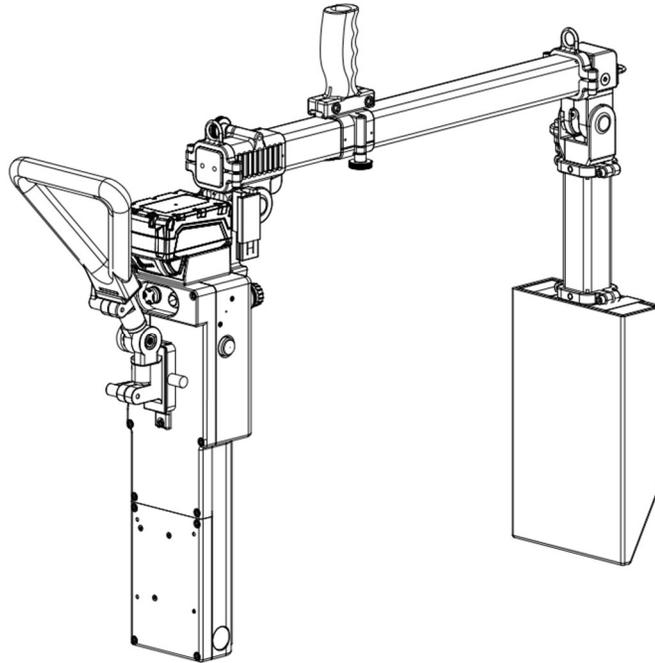


Figure 19 - Optional Handle Configuration Example

- Install the HDMI cable from monitor. Remove cover, install cable into mating connector replace cover.

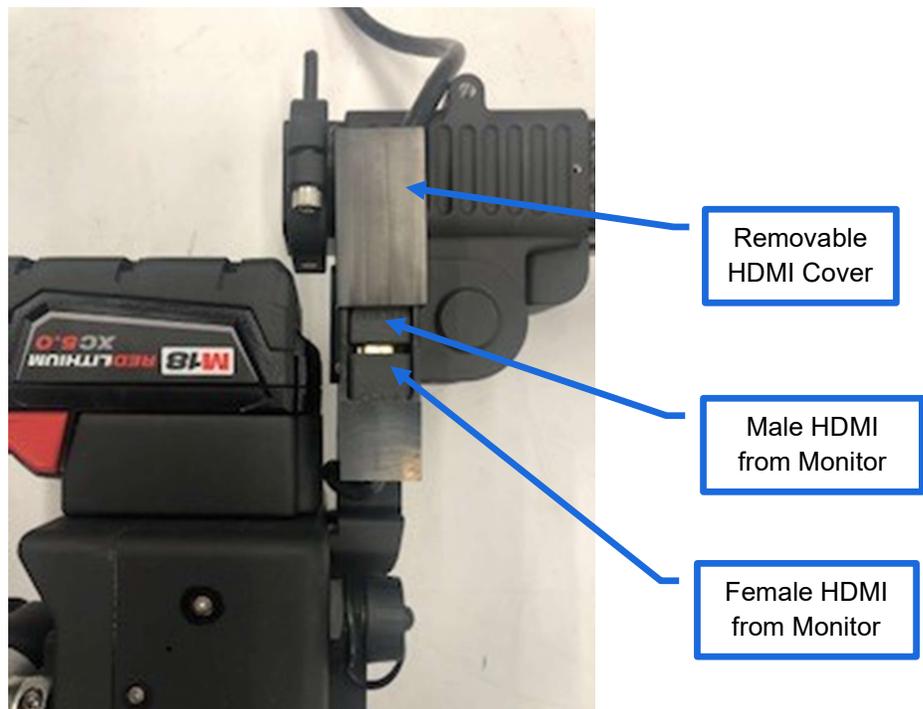


Figure 20 HDMI Cable Installation

QSA GLOBAL

- Turn monitor ON (located on upper-right corner of monitor).

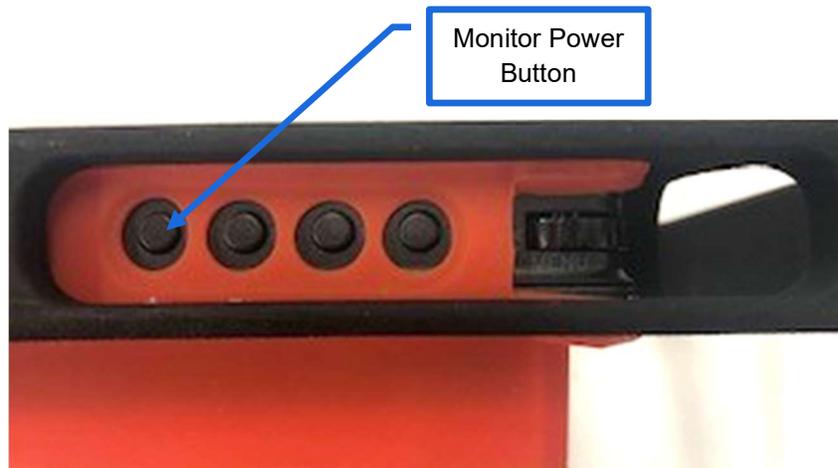


Figure 21 Monitor Power Button

- Install Trigger Switch by pushing up and twisting until it locks into place.

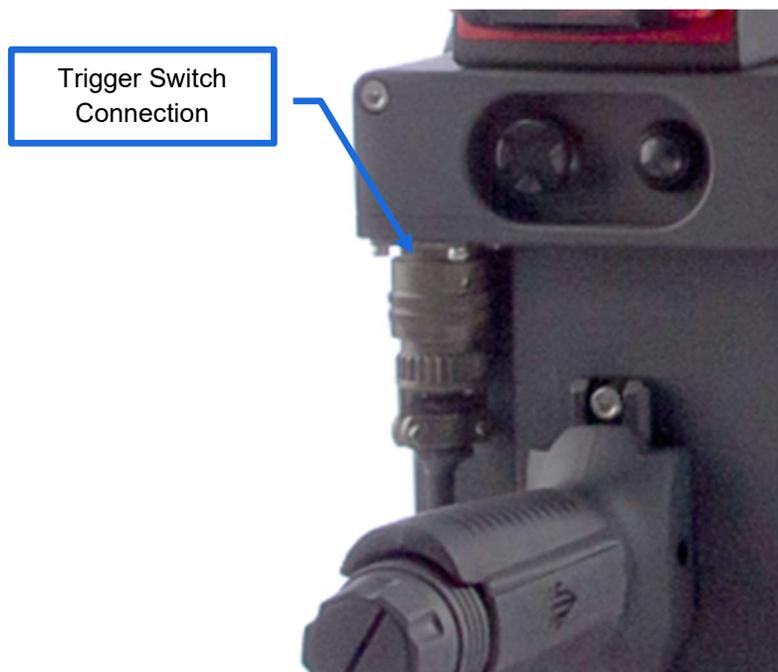


Figure 22 Trigger Switch Connection

QSA GLOBAL.

- Install controller key and turn to ON and allow time for system to initialize. System status indicators (located on either side of main housing) will turn GREEN when system is ready.

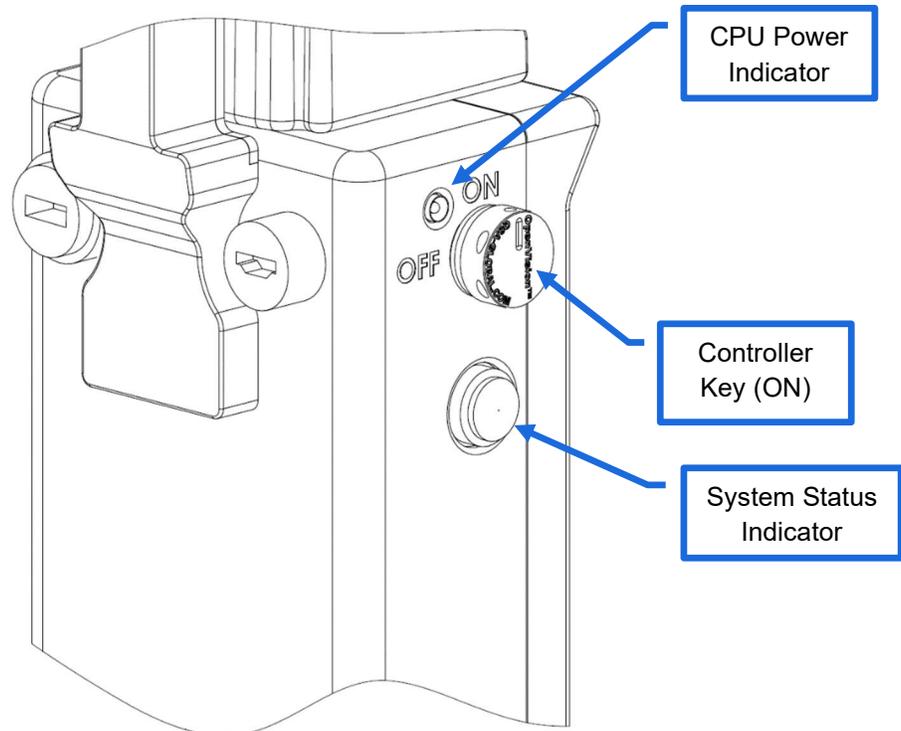


Figure 23 Indicators and Power Switch Details

- Verify kV and mA settings on main status screen.
- Safely perform test shot to verify X-ray functionality.
- During the first exposure after set up, ensure the status indicator light turns from **GREEN** to **AMBER** and that the audible beeps are produced during the exposure.

X-Ray Tube Warm Up

If your Openvision DX System has not been run for an extended period of time (60 days or more), you need to perform a Manual Warm Up of the X-Ray Tube as follows in steps 1-6 to avoid machine damage:

[To perform a manual warm-up of the X-ray tube:](#)

1. Install the controller key and turn to ON: allow time for system to initialize. While warming up, the status indicator light (located on either side of main housing) will turn **AMBER**. System status indicators will turn **GREEN** when system is ready.
 2. Set the kV and mA to the LOW settings.
 3. Turn on x-rays for 30 seconds. Ensure the status indicator light turns from **GREEN** to **AMBER** and that the audible beeps are produced during the exposure.
 4. Reset the kV and mA to the MEDIUM settings.
 5. Turn on x-rays for another 30 seconds. Ensure the status indicator light turns from **GREEN** to **AMBER** and that the audible beeps are produced during the exposure.
 6. The unit is now ready to run on any setting – LOW, MEDIUM or HIGH for normal inspection
- Verify kV and mA settings on main status screen refer to OpenVision DX software manual (MAN-064).
 - Safely perform a test shot to verify X-ray functionality. Ensure the status indicator light turns from **GREEN** to **AMBER** and that the audible beeps are produced during the exposure.

If any of the indicators noted in this section do not occur as noted or the machine is operating abnormally, shut down the device and review the information in the Troubleshooting section of this manual. If the issue cannot be resolved after reviewing the Troubleshooting section, then contact QSA Global, Inc. as the unit may require repair prior to further use.

QSA GLOBAL.

ACCESSORIES.

Heads Up Display (HUD)

This accessory (Item #415140) allows for an alternative to a display mounted directly to the OpenVision DX system. HUD specifications:

Ballistic Protection Standards:

- U.S. MIL SPEC MIL-PRF-31013
- ANSI Z87.1+
- U.S. Federal OSHA
- CE EN 166 FTKN

Temperature:

- Storage: -4 °F to 140 °F (-20 C – 60 C)
- Operating: 32 °F to 122 °F (0 C – 50 C)

Weight

- 114 g

The display position can be moved in multiple directions based on user preferences:



Figure 24 Available directional adjustments to display

QSA GLOBAL.

To make slight adjustments to the focus, adjust the diopter to the left or right using your index finger.



Figure 25 Diopter adjustment

The standard configuration provides the image to your right eye. Clear or tinted lenses can be used based on external lighting conditions:

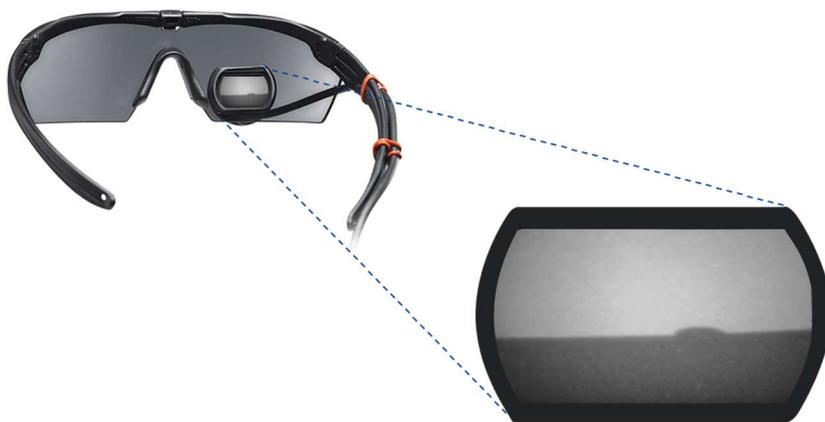


Figure 26 Example image output for HUD



Figure 27 HUD controller and power supply

QSA GLOBAL.

Remote Trigger and Trigger Button Options

The OVDX-NDT-70 comes standard with 415530-B Remote Trigger Harness (6 ft length) and 415540-A Trigger Button Harness (3 ft length). Optional lengths of each can be ordered.

Remote Trigger Harness 3 ft length - 415530-A (Figure 28)



Figure 28 - 415530-A

Remote Button Harness 6 ft length - 415540-B (Figure 29)



Figure 29 - 415540-B

QSA GLOBAL.

Wi-Fi Tablet

The Wi-Fi Tablet assembly (Figure 30, Item # 415430) is an optional accessory which allows for wireless transmission. It can be mounted to the OpenVision™ DX handle assembly or be used as a hand-held tablet. See the software user manual (MAN-063) for operation instructions.



Figure 30 Wi-Fi Tablet

Imager Shield

The imager shield (Figure 31, Item # 415230) is an optional accessory which mounts to the OpenVision DX imager assembly in place of the standard imager cover (Item #415200-11).

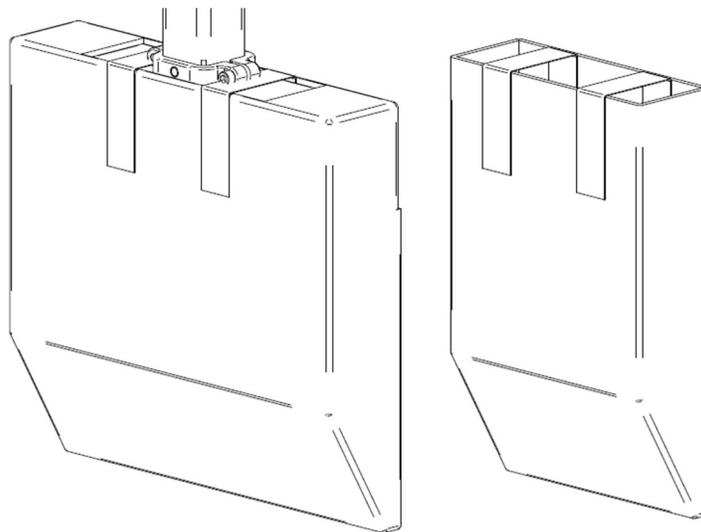


Figure 31 Imager shield installed (left), and imager cover (right, for reference)

The imager shield is most useful when imaging small pipe or other specimens that do not cover the excess beam on either side of the imager assembly and when the OpenVision DX system is fully extended. Figure 11 shows the worst-case effect of output radiation levels with and without the imager shield.

QSA GLOBAL.

MAINTENANCE.

The OpenVision™ DX has been designed to require minimal maintenance by the operator. QSA Global, Inc. recommends daily visual inspection of the system. Specific attention should be paid to the following:

- M18™ battery and its mount (on top of Main Housing) – Ensure both are clean, and in sound shape.
- HDMI cable – Inspect for any cracks or wear.
- Allen/thumb screws – Check for tightness.
- Imager bag – Check for excessive wear.

Use a soft, damp cloth to clean to remove dirt and grime from the OpenVision DX.

CAUTION

Do not use solvents or apply cleaning agents directly on the OpenVision DX as this can damage the components and/or corrode the electronics.

DISPOSAL OF X-RAY EQUIPMENT.

The OpenVision™ DX contains an x-ray tube which uses a beryllium window. Under normal use conditions, the beryllium in the x-ray tube does not represent an inhalation, ingestion or contact health hazard, however, since beryllium is a potential carcinogen, it must be disposed of in a controlled and safe manner.

Beryllium is normally recycled. In cases where this is not justified, they must be labeled, managed and disposed of in accordance with federal, state and local requirements. It is recommended to contact a commercial e-waste recycler/disposal company for assistance in recycling/disposing of the x-ray tube.

TROUBLESHOOTING.

CAUTION

Opening the OpenVision DX potentially will damage the system and will void any warranty. If faced with any issues with the OpenVision DX, contact your QSA Global, Inc. representative immediately for guidance.

The OpenVision™ DX has been designed as a rugged, safe, reliable system. A series of interlocks and self-checks are built into the system to ensure safe operation. These checks may trigger an error code which will prevent normal operation of the OpenVision DX. Use Table 4 as a reference guide for system error codes.

NOTICE: Prior to any troubleshooting, please ensure that a fully-charged M18™ battery is installed. A low battery may cause system to report false error codes.

Table 4 Error Code Guide.

Error Code	Description	Corrective Action
001	Memory Failure	Hard drive and/or system memory error or failure. If restart does not clear error, contact your QSA Global, Inc. representative for repair options.
002	LED Failure	Status Indicator LED(s) are not functioning properly. If restart does not clear error, contact your QSA Global, Inc. representative for repair options.
003	X-ray Tube Failure	X-ray tube is not communicating or has malfunctioned. If restart does not clear error, contact your QSA Global, Inc. representative for repair options.
004	X-Ray Over Temperature	X-ray tube has exceeded its operating temperature, forcing system to stop emitting X-rays. Perform following actions to recover from this error: <ul style="list-style-type: none">• Turn off unit• Place in cooler environment for 30 minutes• Turn unit on
005	Board Over Temperature	Main control board has overheated. Perform following actions to recover from this error: <ul style="list-style-type: none">• Turn Off unit• Place in cooler environment for 30 minutes• Turn unit on
006	Imaging Camera Failure	Communication error and/or failure with targeting camera. Perform a system restart, if a restart does not clear the error, contact your QSA Global, Inc. representative for repair options.
007	Targeting Camera Failure	Communication error and/or failure with targeting camera. Contact your QSA Global, Inc. representative for repair options.
008	Low Voltage	M18™ battery has insufficient charge; change battery.
009	Camera Communication Error	Communication error with internal camera. Cycle system power to clear error.
010	Camera Communication Error	Communication error with internal camera. Cycle system power to clear error.

QSA GLOBAL.

QSA GLOBAL, INC. CONTACT INFORMATION

QSA Global, Inc. Headquarters

40 North Avenue, Burlington, MA 01803 USA

+1 781 272 2000 | +1 800 815 1383

North America Sales & Service

6765 Langley Drive, Baton Rouge, LA 70809 USA

+1 225 751 5893 | +1 800 225 1383

North America Service Center

3200 Awesome Lane, LaPorte, TX 77571

+1 713 944 3200

EMEA + India Sales & Service

U Lomy 1069 334 41, Dobrany, CZ

+44 1296 435193

Asia Sales

3F Chungghae Building, 12 Sunrung-ro 103 Gil

Kangnam-Ku, Seoul 06145, South Korea

+82 2 558 3335

All goods and services are sold subject to the terms and conditions of QSA Global, Inc. A copy of these terms and conditions are available at www.qsa-global.com.

OpenVision® is a registered trademark of Illinois Tool Works. in the United States of America, Canada, Peoples Republic of China, European Union, Republic of Korea, Russian Federation, and Saudi Arabia. Milwaukee® and M18™ are registered trademarks or trademarks of Milwaukee Tool. PAYA PirateEye are Copyright ©. All product and company names are trademarks™ or registered trademarks® of their respective holders. Use of them does not imply any affiliation with or endorsement of or by them.

©2023 QSA Global, Inc.

APPENDIX 1: PARTS LIST.

Part #	Description
OVDX-NDT-70	OpenVision™ DX System, Complete
415400	OVDX Handle Assembly
415440	OVDX Lightweight Monitor Assembly
415600	OVDX Backscatter Shield Assembly
ELE088	HDMI Cable
ELE054	Milwaukee® M18™ Battery
313056	Controller Key
415140	Pirate Eye Head Mount Display
415230	Imager Shield Assembly
415430	Tablet Assembly
415530-A	Remote Trigger Assembly (3 ft)
415530-B	Remote Trigger Assembly (6 ft)
415540-A	Trigger Button Assembly (3 ft)
415540-B	Trigger Button Assembly (6 ft)

ADDENDUM

This addendum provides updated contact information not currently described in QSA Global, Inc. Handling Instructions and Operation and Maintenance Manuals.

The phone number to contact the EMEA + India Sales & Service center has been updated to **+ 00 420 377 183 838**.

Impacted Handling Instructions and Operation and Maintenance Manuals include:

- HI-018 (Safety Guidance for Radiography Sources) Issue 11
- HI-077 (Model 424-69 Handling Instructions) Issue 1
- HPI-115 (3605B Container Operating Instructions) Issue 5
- MAN-010 (Model 865 Operation and Maintenance) Issued October 2022
- MAN-020 (Model 650L Source Changer Operation and Maintenance) Issued May 2021
- MAN-027F (Model 880 Series Operation and Maintenance - French Translation) Issued November 2023
- MAN-027RU (Model 880 Series Operation and Maintenance - Russian Translation) Issued May 2021
- MAN-037 (Model 989 SCAR Operation and Maintenance Instruction Manual) Issued October 2022
- MAN-038 (Model Sentry 110 & Model Sentry 330 Operating and Maintenance Manual) Issued May 2021
- MAN-039 (Model 867 Operating Manual) Issued May 2021
- MAN-040 (Model 360 Series Operating Manual) Issued May 2021
- MAN-049 (Model 880SC Operating Manual) Issued May 2021
- MAN-054 (Model 1075 Operation and Maintenance Manual) Issued May 2021
- MAN-055 (Model 771 Radiographic Source Changer and Type A Transport Package) Issued November 2022
- MAN-056 (Sentinel Storage Container Instructions) Issued December 2022
- MAN-057 (Model 989M Operation & Maintenance Instruction Manual) Issued December 2022
- MAN-059 (OpenVision DX - OVDX-NDT-70 Hardware Manual) Revision D
- MAN-059F (OpenVision DX - OVDX-NDT-70 Hardware Manual – French Translation) Revision C
- MAN-062 (OV Security Hardware Manual) Revision D
- MAN-062F (OV Security Hardware Manual – French Translation) Revision D
- MAN-063 (OpenVision DX - OVDX-70 Software Manual) Revision E
- MAN-064 (Open Vision Security Software Manual) Revision B
- MAN-065 (Remote Controls SAN886 & 887 Series Operating Manual) Issued July 2021
- MAN-065CZ (Remote Controls SAN886 & 887 Series Operating Manual) Issued July 2021
- MAN-065RU (Remote Controls SAN886 & 887 Series Operating Manual) Issued July 2021

QSA GLOBAL.

- MAN-066 (OpenVision HD Software Manual) Revision B
- MAN-067 (OVHD-NDT-70 Hardware Manual) Revision C
- MAN-068 (OVHD-NDT-70 Hardware Manual) Revision A
- SI14050.CON (GammaMat TI, TI-F & TI-FF Manual) Issued May 2024

Should you have any questions regarding this addendum, please contact QSA Global, Inc. for further assistance.